

MR Unit (Regulator with Mist Separator)

Series *AMR3000 to 6000*

Standard Specifications

Model	AMR3000	AMR4000	AMR5000	AMR6000
Port size	1/4, 3/8	1/4, 3/8, 1/2	1/2, 3/4	3/4, 1
Fluid	Air			
Proof pressure	1.5 MPa			
Max. operating pressure	1.0 MPa			
Setting pressure range	0.05 to 0.85 MPa			
Ambient and fluid temperature	-5 to 60°C (No freezing)			
Construction	Relieving type			
Filtration	0.3 μm			
Oil mist density in the outlet side	Max. 1.0 mgf/Nm ³ (≅ 0.8 ppm) ⁽¹⁾⁽²⁾			
Rated flow (l/min (ANR)) ⁽³⁾	750	1500	3500	6000
Weight (kg)	1.8	2.8	3.5	6.7

- Note 1) Compressed air density: 30 mgf/Nm³.
 Note 2) An element for the mist separator is included on the inlet side. Mineral grease is applied on the sliding parts inside the regulator. As such, improper use could cause run off of these lubricants to the outlet side. Please contact SMC if problems take place during operation.
 Note 3) Inlet pressure: 0.7 MPa Use caution not to supply air more than the rated amount, otherwise oil may flow to the outlet side.

Accessory (Standard)/Part No.

Model name	Model	AMR3000	AMR4000	AMR5000	AMR6000
Bracket		13576	13556	13587	13568
Pressure gauge ⁽⁵⁾⁽⁶⁾	1.0 MPa	G36-10-□01		G46-10-□02	

Accessory (Option)/Part No.

Model name	Model	AMR3000	AMR4000	AMR5000	AMR6000
Adapter assembly ⁽⁷⁾		1/4: E3-□02 3/8: E3-□03	1/4: E4-□02 3/8: E4-□03 1/2: E4-□04	1/2: E5-□04 3/4: E5-□06	3/4: E6-□06 1: E6-□10
Float style auto-drain (AMR*100) ⁽⁸⁾		AD33-X203	AD33-X202	AD33-X210	AD33-X201
Compact pressure switch		IS1000-01 (0.4 MPa setting)			
PT elbow ⁽⁹⁾		135510		135613	

- Note 5) □ in the gauge part number (e.g. G36-10-□01) indicates thread. Specify no symbol for "Rc", and "N" for "NPT".
 • Please consult with SMC if "NPT" gauge is required.
 Note 6) Use caution not to tighten excessively when mounting a pressure gauge, otherwise it may result in a breakdown. Use a pipe tape for sealing.
 Recommended tightening torque for pressure regulator: R 1/8 = 7 to 9 N·m, R 1/4 = 12 to 14 N·m
 Note 7) Piping adapter, O-ring, Hexagon socket bolt, Hexagon socket bolt assembly. These are shipped together with products. "□" in the gauge part number indicates thread type. Specify no symbol for "RC", "N" for "NPT", and "G" for "F".
 Note 8) Min. operating pressure = 0.1 MPa
 Note 9) To mount a compact pressure switch from the back, PT elbow is needed.


Mist separator and regulator are combined together.
 High Filtration (0.3 μm)
 Space-saving and easy piping.



Compact Pressure Switch Specifications (For further information, Refer to Best Pneumatics Vol. 16.)

Model	IS1000-01			
Set pressure range (OFF)	0.1 to 0.4 MPa			
Differential	0.08 MPa			
Contact point construction	1a			
Max. contact point capacity	2 VA AC, 2 W DC			
Voltage (AC, DC)	12 V	24 V	48 V	100 V
Max. current	50 mA	50 mA	40 mA	20 mA
Operating time	1.2 ms			
Shock resistance	30 G			

JIS Symbol



F.R.L.
 AV
 AU
 AF
 AR
 IR
 VEX
 AMR
 ITV
 IC
 VBA
 VE□
 VY1
 G
 PPA
 AL

Series AMR3000 to 6000

How to Order

AMR 4 0 00 - 03 S E3 - R

MR unit

Auto-drain

0	None
1	With auto-drain

Body size

3	3/8
4	1/2
5	3/4
6	1

Thread type

Nil	Rc
N	NPT
F	G

Pressure gauge mounting

Nil	Flow direction: Left → Right
R	Flow direction: Right → Left

Pressure gauge

Nil	None
S	With pressure switch

Port size

Symbol	Port size
02	1/4
03	3/8
04	1/2
06	3/4
10	1

Adapter assembly port size (2 pcs.)

Nil	None
E2	1/4
E3	3/8
E4	1/2
E6	3/4
E10	1

* The port size of adapter assembly is same as the port size of the body.

Adapter Assembly (Part number for one piece)

E 3 - 02

Applicable model

3	AMR3□00-02/03
4	AMR4□00-02 to 04
5	AMR5□00-04 to 06
6	AMR6□00-10

Port size

02	1/4
03	3/8
04	1/2
06	3/4
10	1

Adapter assembly

Thread type

Nil	Rc
N	NPT
F	G

Construction

Working principle

The compressed air from the air source passes from the IN side through the top of element ⑥ and flows inward. The compressed air that flowed in passes through the MC cartridge element provided inside element ⑥, where all dust that is larger than 0.3 μm is removed. Then, the mist is arrested by inertial collision, direct interception, and dissipation through Brownian movement on the surface and the inside of the filtering fibers of the external separation element. The mist then coagulates to form a large drop, becomes separated from the compressed air, accumulates in case ③, and is discharged through the drain valve. Meanwhile, the clean compressed air in housing ② passes through flow hole A of body ①, it is reduced to a specified pressure by the pressure reducing valve, and is discharged from the OUT.

Auto-drain type

Port size 1/4

Drain

Component Parts

No.	Description	Model		
		AMR3000	AMR4000	AMR5000
①	Body	Aluminum die-casted		
②	Housing	Aluminum die-casted		
③	Bonnet	Polyacetal		Aluminum die-casted

Replacement Parts

No.	Description	Material	Part no.			
			AMR3000	AMR4000	AMR5000	AMR6000
④	Bowl assembly	Aluminum die-casted	13573A	13553A	13583A	13563A
⑤	Diaphragm assembly	Weather resistant NBR	1349161A	131515A	131515A	131614A
⑥	Element (Note)	—	13579	135511	13589	13569
⑦	Valve assembly	Brass, HNBR	135711A	13154A	135811A	135614-1A
⑧	Valve spring	Stainless steel	135011	131514	131613	135413
⑨	O-ring	NBR	G75	G90	G100	G115
⑩	Gasket	Fiber	135714	635327	635327	63555
⑪	Handle	POM	1349167	131534	131534	131634

Note) The MC cartridge element and the separation element are integrated.


Regulator with Mist Separator Series AMR3000 to 6000

Flow Characteristics

Inlet pressure: 0.7 MPa


AMR3000/3100

Rc 1/4

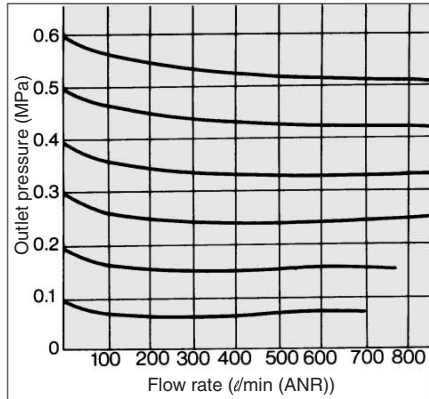


AMR4000/4100

Rc 3/8

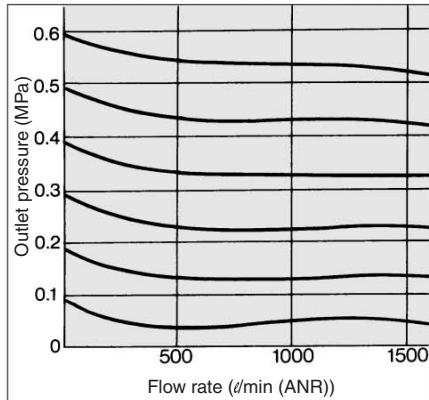


AMR5000/5100

Rc 1/4

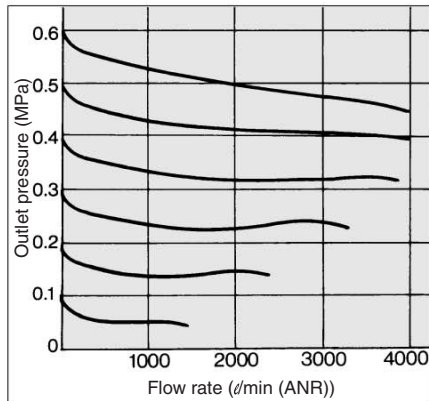

AMR6000/6100

Rc 1

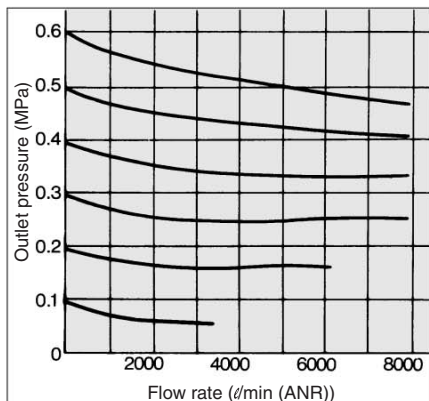


Pressure Characteristics

Inlet pressure: 0.7 MPa


Outlet pressure: 0.2 MPa

Flow rate: 20 l/min (ANR)


AMR3000/3100

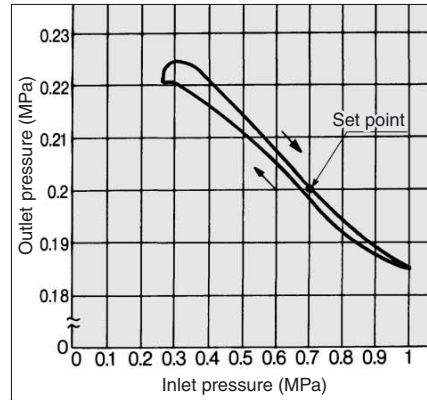


AMR4000/4100

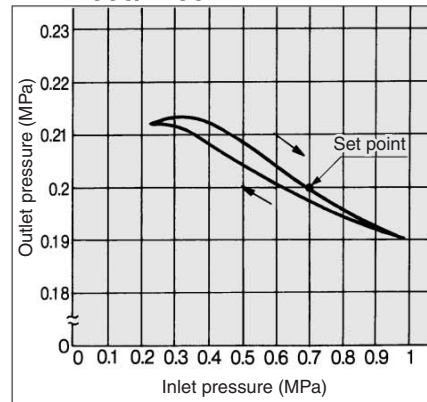

AMR5000, 5100

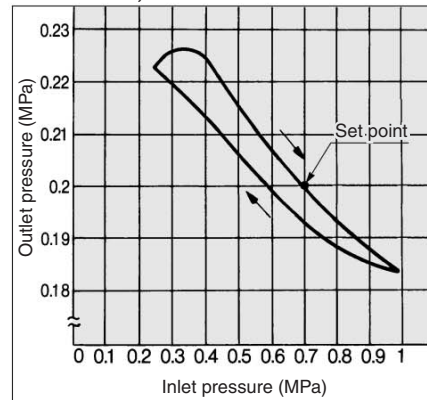

AMR6000/6100

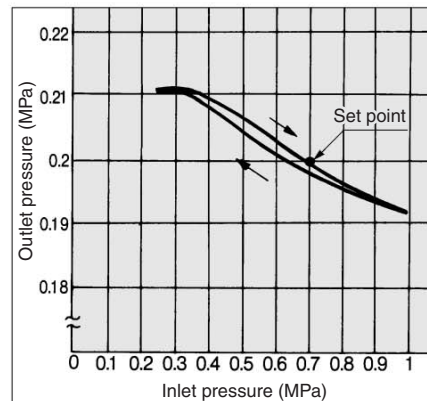

Precautions

Be sure to read before handling. Refer to pages 14-21-3 to 14-21-4 for Safety Instructions and Common Precautions.

Mounting/Adjustment

Warning

1. Do not place a magnetic object near the pressure switch. Unintended operation may result.
2. Do not apply strong shocks (over 300 m/s²) to the pressure switch to prevent the switch from damage.

Caution

1. Release the lock to adjust the pressure. After the adjustment, engage the lock. Failure to observe this procedure could damage the handle or cause the outlet pressure to fluctuate.

1) On the AMR3000 type, pull the adjustment handle to release the lock and push the handle to engage the lock. If it does not lock easily, turn the handle slightly clockwise or counterclockwise before pushing it.

2) On the AMR4000 to 6000 types, pull the adjustment handle to release the lock. (An orange colored line is provided at the bottom of the adjustment handle for visual checking.) Push the adjustment handle to engage the lock. If it does not lock easily, turn the handle slightly clockwise or counterclockwise; then, push it until the orange colored line is no longer visible.



Maintenance

Warning

1. Replace the filter element within 2 years of operation or before the pressure drop reaches 0.1 MPa. Failure to observe this precaution could damage the filter element.

F.R.L.

AV

AU

AF

AR

IR

VEX

AMR

ITV

IC

VBA

VE□

VY1


G

PPA

AL

Series AMR3000 to 6000

Dimensions

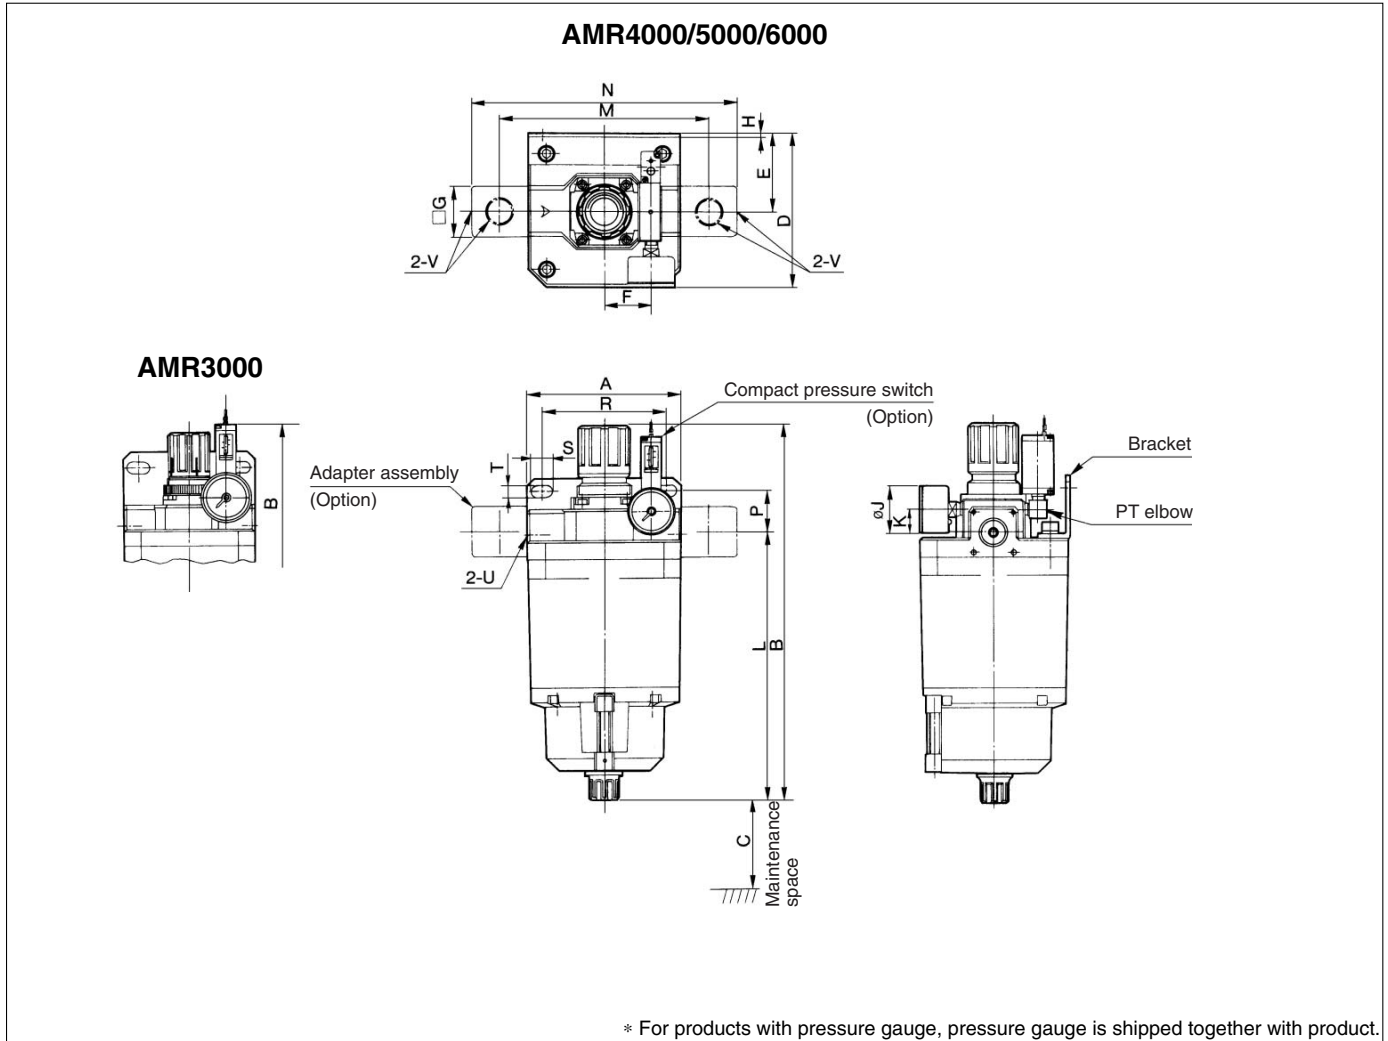


* For products with pressure gauge, pressure gauge is shipped together with product.

Model	Port size		A	B	C	D	E	F	G	H	J	K	L	M	N	Bracket dimensions				With auto-drain	
	U (Body)	V (Adapter)														P	R	S	T	B	L
AMR3000	1/4, 3/8	1/4, 3/8	100	264	10	101	51	28	32	3.2	37	21.5	182	144	180	50	78	8	9	260	178
AMR4000	1/4, 3/8, 1/2	1/4, 3/8, 1/2	120	302	10	121	61	37	40	3.2	37	18	215	166	210	35	97	16	9	298	211
AMR5000	1/2, 3/4	1/2, 3/4	130	370	45	131	66	37	48	4.5	42	16	281	188	246	45	98	21	11	366	277
AMR6000	3/4, 1	3/4, 1	160	440	70	161	81	44	56	4.5	42	18.5	325	230	290	46.5	115	26	11	436	321

Accessory/Compact Pressure Switch: IS1000-01

* For details, refer to Best Pneumatics Vol. 16.

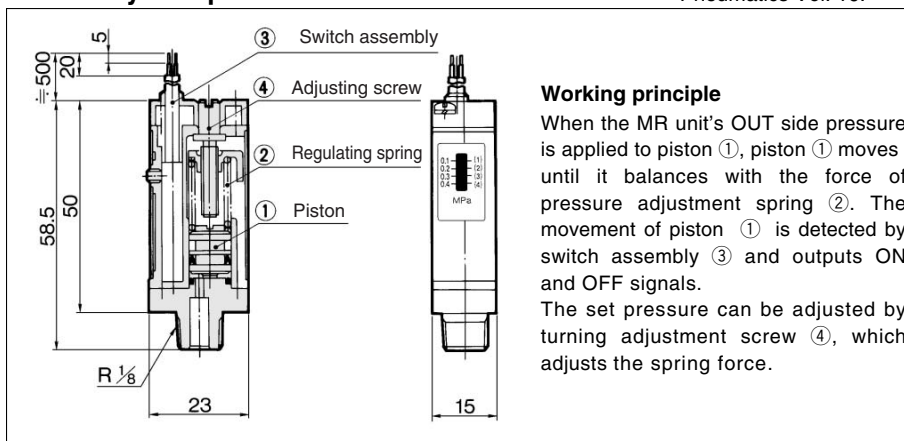

Adapter Assembly Installation Procedure

1. Install the O-ring in the O-ring groove of the adapter.
2. Orient the adapter port to the desired direction.
3. Using a hexagon wrench, tighten the four hexagon socket head bolts to install an adapter.
4. Screw in the hexagon socket head cap into the unused port of the adapter.

